

# #3 SBI Building


- wire each step and test -

## Pre Wiring Steps

(1) Build frame  
Add motors




(2) Solder Socket


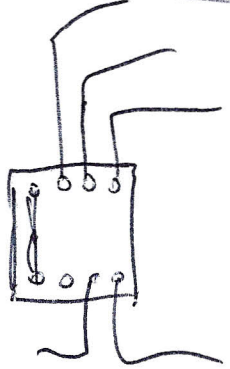


(3) Add socket & Pot to frame

One OR the other motor is on

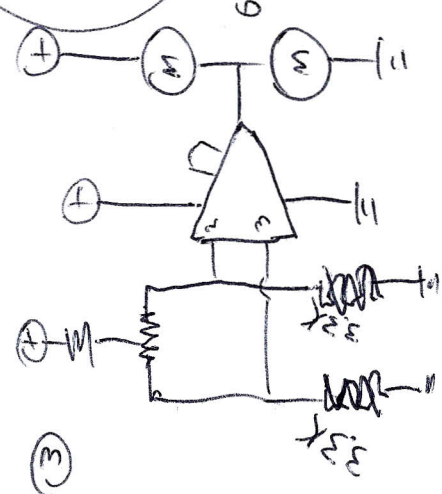

See that both motors are pulling the Bot forward

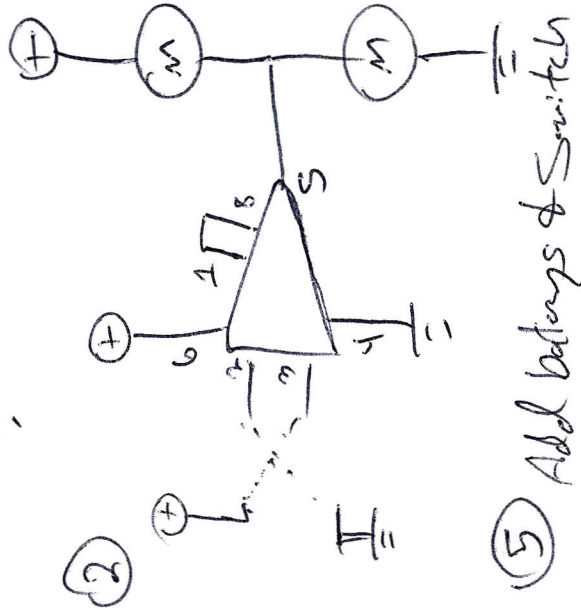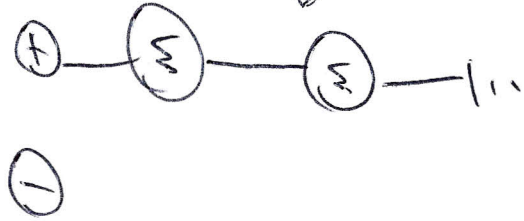

(5) Add battery & Switch

(6) Race!